

## Igniting the fire

1. To ignite the fire, both the combustion air valve and smoke gather valve should be fully opened.
2. Stand no further than 4m from the fireplace.

3. Take the aluminium remote in your hand with the dark grey side facing up.

You will see three buttons (fig. 1). Point the remote directly at the infrared eye of the fire (fig.3)

Press button **B** and **C** simultaneously for approx. 6 seconds until the red light of the reset light flashes.

4. Now you can release the buttons.

5. You will hear the ticking of the ignition (the pilot will ignite) and after some seconds the full fire will ignite.

The red LED of the reset button should go out.

6. When the fire is lit the flame height can be adjusted using the control buttons on the remote control.

If you hold down button **B**, the fire will rise. If you hold down button **A**, the fire will go down.

7. In order to extinguish the fire, hold button **C** until the fire is out. If a fan is fitted, the fan will stay on for some time in order to ventilate the burner.

## Replacing the batteries of the remote control (fig. 2)

**NOTE:** You should not bend the infrared eye. Unscrew the small rubber legs on the underside of the remote, turning in an anti-clockwise direction and take out the part within the aluminium casing.

Replace the batteries ( 2x AA type). Plug the IR back into the opening of the casing and place the lid back.

Screw the legs back in again.

## Startup after power cut

If the LED light of the reset button (fig. 4) is lit, the power to the fire has been cut and the remote requires reconfiguring.

To reconfigure the memory of the remote control take the following steps:

1. Press the reset button for the light to extinguish.
2. Press button **B** and **C** for approx. 6 seconds (the light should begin flashing).
3. Press button **C** only. (the light goes off).
4. Press button **B** and **C** simultaneously approx. 6 seconds (light will flash again).
5. Press button **C** only.

The fire and the remote control has been configured and the fire can reignited.

We wish you great pleasure with your Boley fireplace.

For further information and the complete manual please visit: [www.boley.nl](http://www.boley.nl)



fig. 1

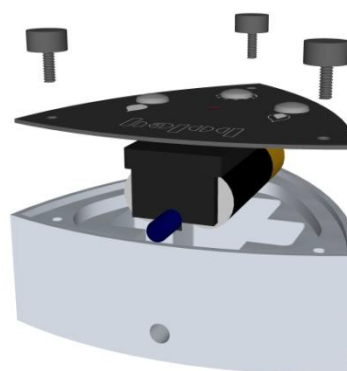 


fig.2

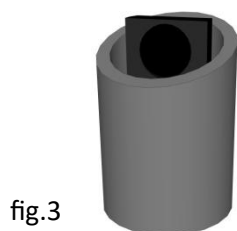 


fig.3



fig.4